


GARDEN FURNITURE CARE & SAFETY GUIDE

IMPORTANT – PLEASE RETAIN FOR FUTURE REFERENCE

Read carefully before use.

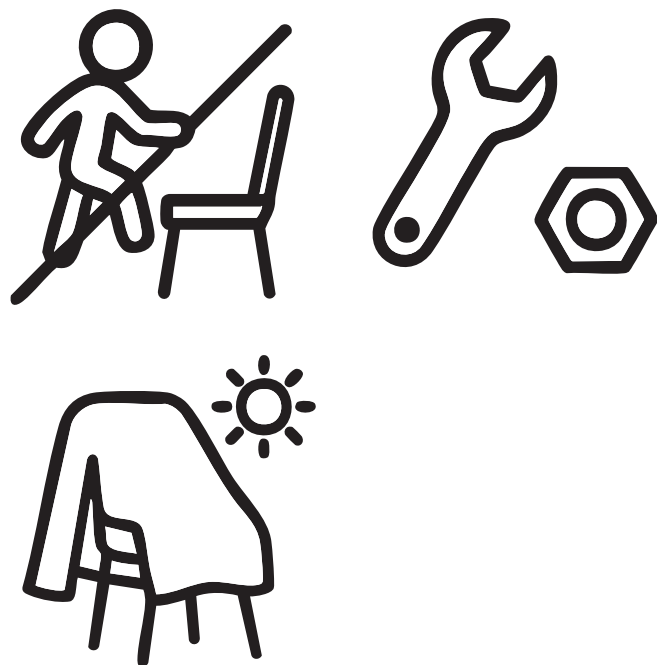

SAFETY WARNINGS

- Do not allow children to climb or play on the furniture unsupervised.
- Regularly check underneath the product and tighten fixings if needed.
- Always use furniture covers when not in use. Exposure to sunlight can cause fading.
- Clean thoroughly with a soft cloth before covering to avoid mould or damage.
- During off-season periods, store your furniture in a dry, protected area.
- Do not use a pressure washer or harsh chemicals to clean.

CARE & CLEANING

General

- Use a soft cloth or brush to remove debris.
- For thorough cleaning, we recommend using a cloth or brush with minimal to no moisture — well-wrung out and lightly dampened with a heavily diluted mild soap solution.
- Avoid abrasive substances, rinsing and power washing.

Wood

- It is important to oil wooden garden furniture. We recommend Teak oil or a Garden restorer oil of your choice.
- For thorough cleaning, we recommend using a cloth or brush with minimal to no moisture — well-wrung out and lightly dampened with a heavily diluted mild soap solution.
- Use Hardwood Garden Furniture Oil to preserve appearance at the start and end of the season.
- Always test on a hidden area first.
- Avoid abrasive substances, rinsing and power washing.

Metal / Rattan

- For thorough cleaning, we recommend using a cloth or brush with minimal to no moisture — well-wrung out and lightly dampened with a heavily diluted mild soap solution. Allow to fully dry before storing.
- Avoid abrasive substances, rinsing and power washing.