



# ASSEMBLY INSTRUCTION INDIANA - 6 DRW DRESSER AND MIRROR


## PARTS LIST

| NO | DRAWING                                                                           | DESCRIPTION  | QTY |
|----|-----------------------------------------------------------------------------------|--------------|-----|
| ①  |  | CABINET BODY | 1   |
| ②  |  | MIRROR FRAME | 1   |
| ③  |  | SUPPORT      | 2   |

## STEP 1

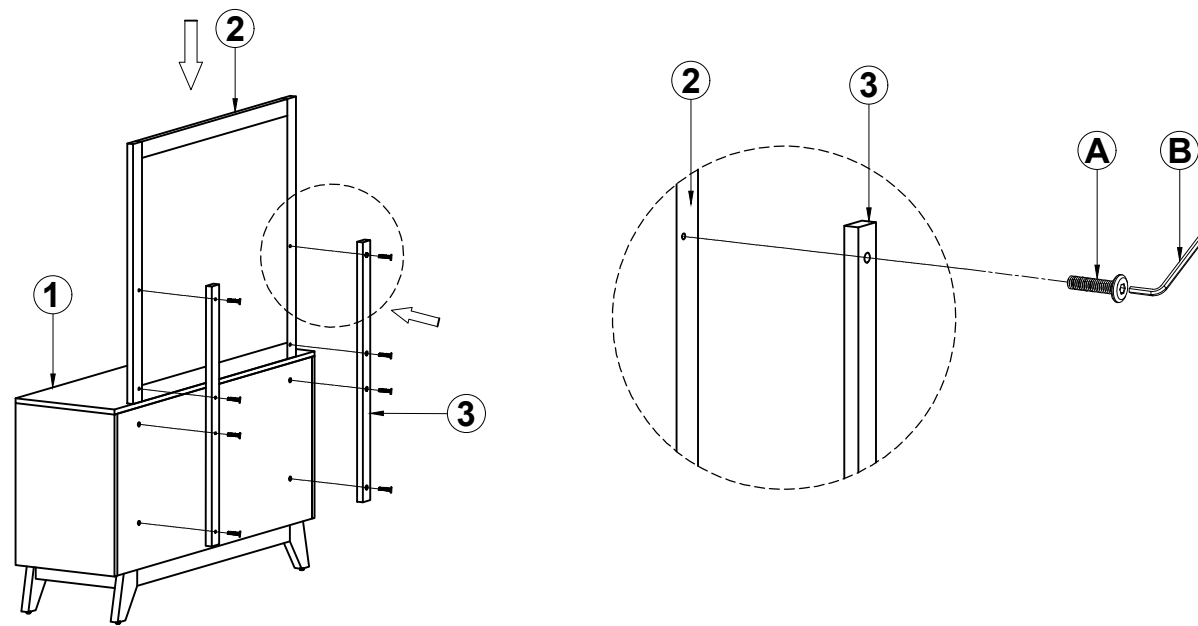

## STEP 2

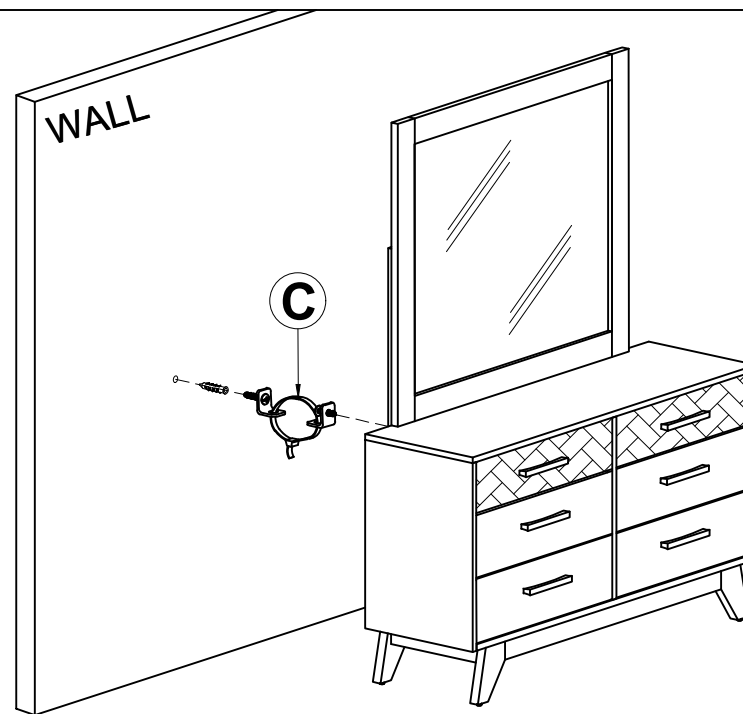

## HARDWARE LIST

| NO | DRAWING                                                                             | DESCRIPTION            | QTY   |
|----|-------------------------------------------------------------------------------------|------------------------|-------|
| Ⓐ  |  | BOLT<br>(M6 x 30mm)    | 8     |
| Ⓑ  |  | ALLEN KEY<br>(40x60mm) | 1     |
| Ⓒ  |  | ANTI TIP KIT           | 1 Set |

## STEP 3

